



Three-phase HiOne Series

Quick Installation Guide

HiOne-(8-20)T-G3
HiOne-8B-G3

1 General Declaration

- The information in this quick installation guide is subject to change due to product updates or other reasons.
- This guide cannot replace the product labels or the safety precautions in the user manual unless otherwise specified. All descriptions here are for guidance only.
- Before installations, read through the quick installation guide and the user manual to learn about the product and the precautions.
- All installations should be performed by trained and knowledgeable technicians who are familiar with local standards and safety regulations.
- Check the deliverables for correct model, complete contents, and intact appearance. Contact the manufacturer if any damage is found or any component is missing.
- Use insulating tools and wear personal protective equipment when operating the equipment to ensure personal safety. Wear anti-static gloves, clothes, and wrist strip when touching electron devices to protect the inverter from damage. The manufacturer shall not be liable for any damage caused by static electricity.
- Strictly follow the installation, operation, and configuration instructions in this guide and user manual. The manufacturer shall not be liable for equipment damage or personal injury if you do not follow the instructions.
- All cables in this article are copper cables.
- EU Declaration of Conformity

Hoymiles Power Electronics Inc. hereby declares that (model: HiOne-8/10/12/16/20T-G3) is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2014/35/EU, 2011/65/EU, (EU) 2015/863, and 2012/19/EU.

Hoymiles Power Electronics Inc. hereby declares that (model: HiOne-8B-G3) is in compliance with the essential requirements and other relevant provisions of directives 2014/30/EU, 2011/65/EU, (EU) 2015/863, and EU Battery Regulation (EU) 2023/1542.

Hoymiles Power Electronics Inc. hereby declares that Hoymiles Data Transfer Stick (model: DTS-WL-G3) is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU) 2015/863.

The original EU Declaration of Conformity may be found at <https://www.hoymiles.com>.



Hoymiles Energy Storage Inverter works with Hoymiles Data Transfer Stick. Hoymiles DTS described in this document is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY (the maximum transmitted power): 2412 to 2472 MHz (<20 dBm).


	Caution Failure to observe any warnings may result in injury.		CE mark
	Danger to life due to high voltage.		Do not dispose of the inverter as household waste.
	Hot surface Burn danger due to hot surface that may exceed 60 °C.		RoHS mark
	After the inverter is turned off, wait for at least 5 minutes before opening the inverter or touching live parts.		Observe the documentation.

2 Packing List


HiOne-(8-20)T-G3 Packaging Box

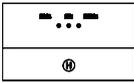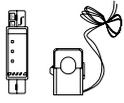 Inverter*1	 Bracket*2	 Expansion Screw M8*2	 OT Terminal*2 Screw M4*8	 Communication Cable (5 m)*1
 Three-phase Meter*1	 DTS-WL-G3*1	 Decorative Cover*2	 Document*1	


HiOne-8B-G3 Packaging Box

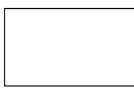 Battery*1	 Bracket*2	 Expansion Screw M8*2	 Screw M4*6	 Decorative Cover*2
--	--	--	---	---

Accessory Packaging Box

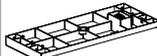 Handle*2	 Base*1	 Top Cover*1	 Expansion Screw M8*4
---	---	--	--

Accessory Packaging Box (For Parallel Towers)




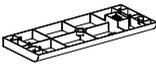
 Base*1	 Top Cover*1	 Battery Cable*1	 Stepped Screw M4*5	 Expansion Screw M8*4
---	--	--	--	--

Note:

The accessory packaging box (for parallel towers) must be purchased separately when you install a multi-battery system.

3 Product Appearance


Unit: mm

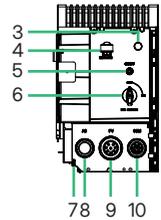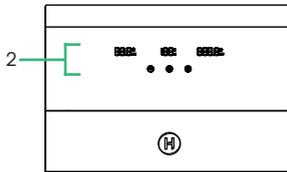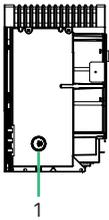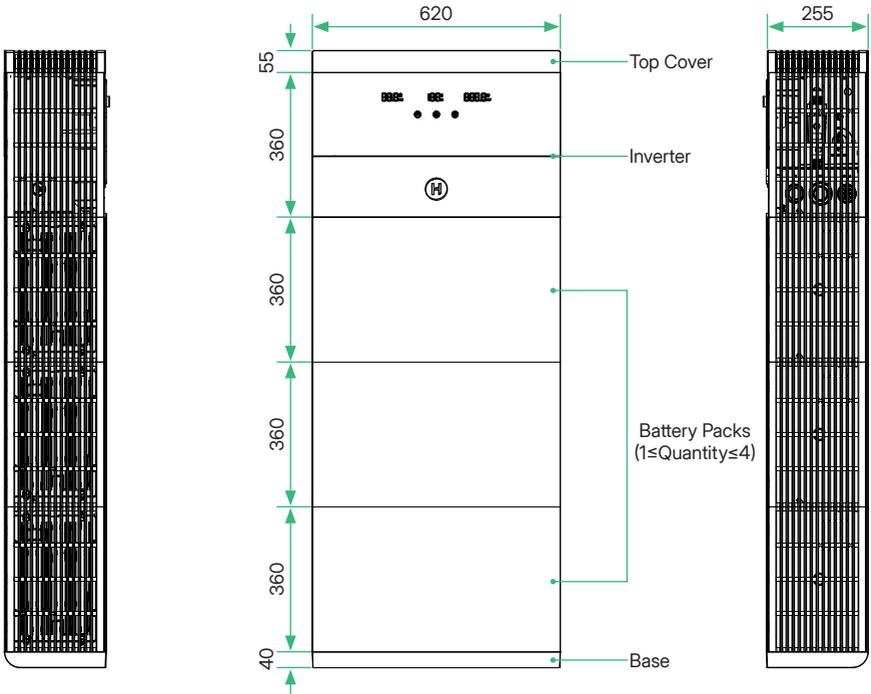

No.	Description	No.	Description
1	Cable Entry for Parallel Batteries	6	DC Switch
2	LED Indicators	7	Ground Terminal
3	Relief Valve	8	AC Cable Entry
4	Data Transfer Stick (DTS) Port	9	PV Cable Entry
5	Power Button	10	COM Cable Entry


4 Installation Instructions

Environmental Requirements

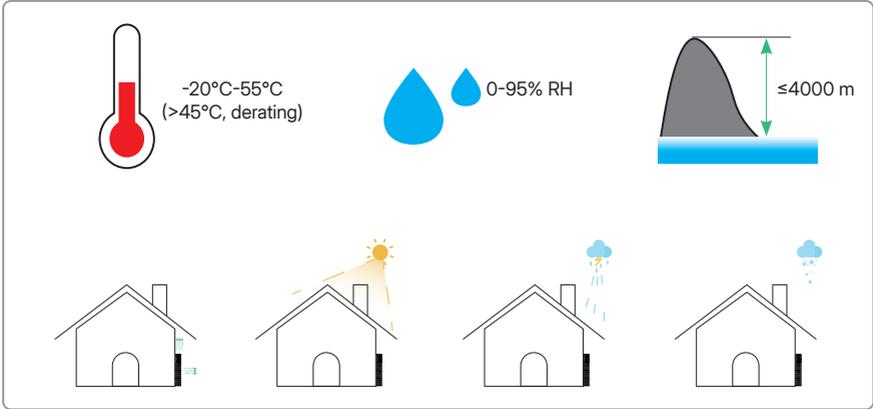


Space Requirements

Unit: mm

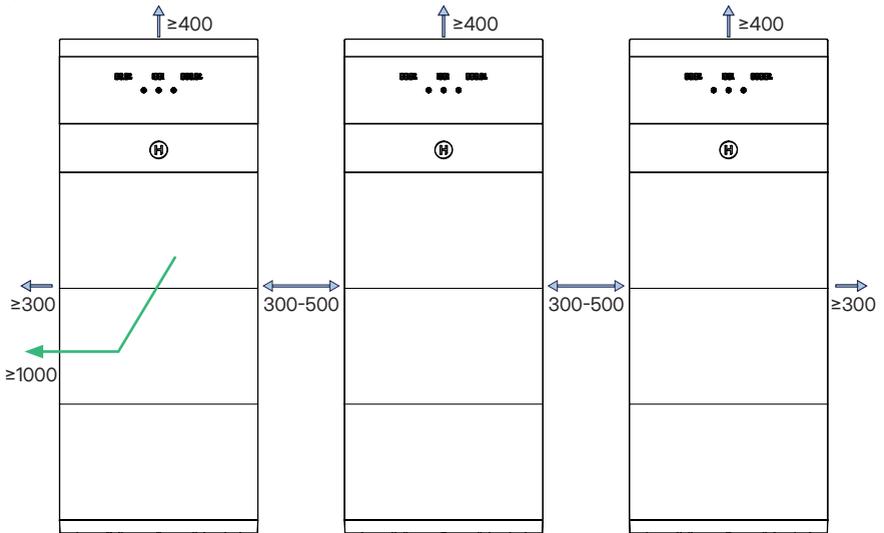


Stackable Requirements

Up to four batteries can be stacked in a battery tower, and up to two battery towers can be connected to one inverter.

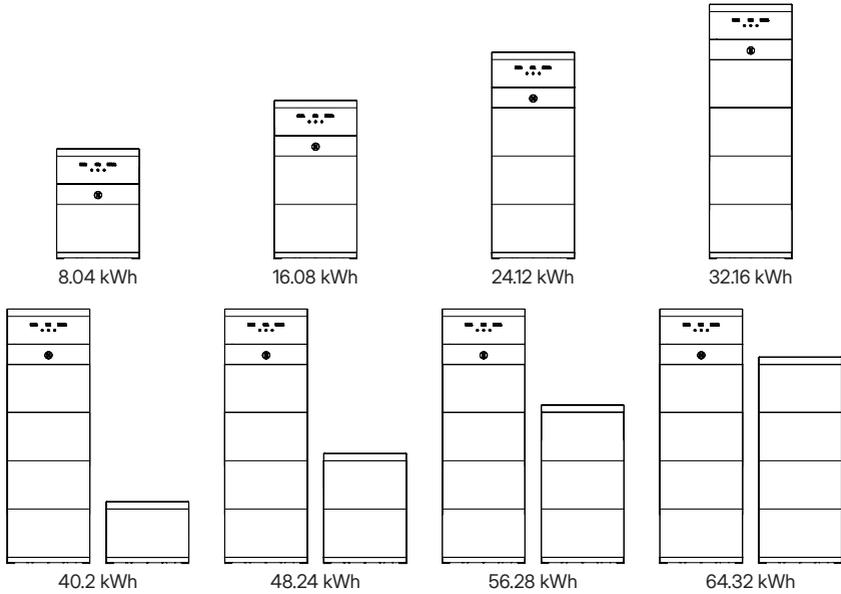

Installation Tools

The following tools are recommended in the installation process, and other auxiliary tools can also be used if necessary.

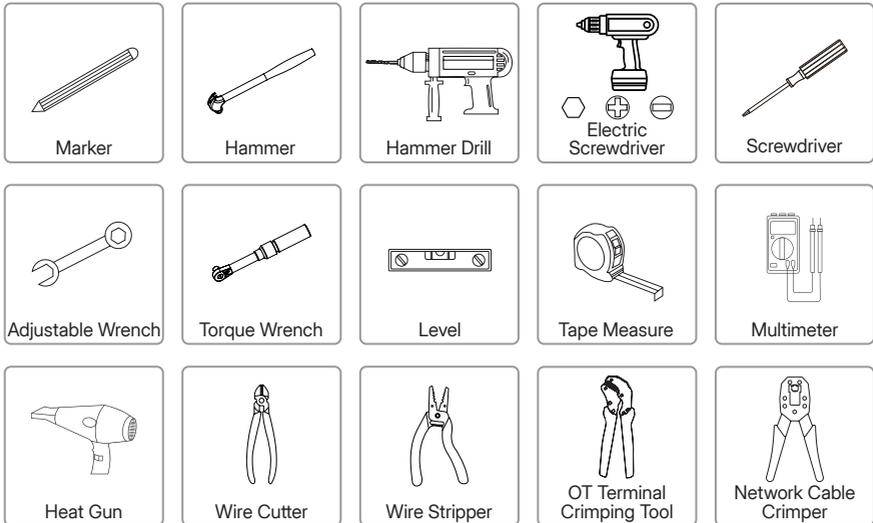


Personal Protective Equipment




Installation Steps

Step 1 Place the base on a level ground, parallel to the wall, and keep a distance of 50 mm to 75 mm. Ensure that the level bubble is in the center; if not, use a flat head screwdriver to adjust the base.

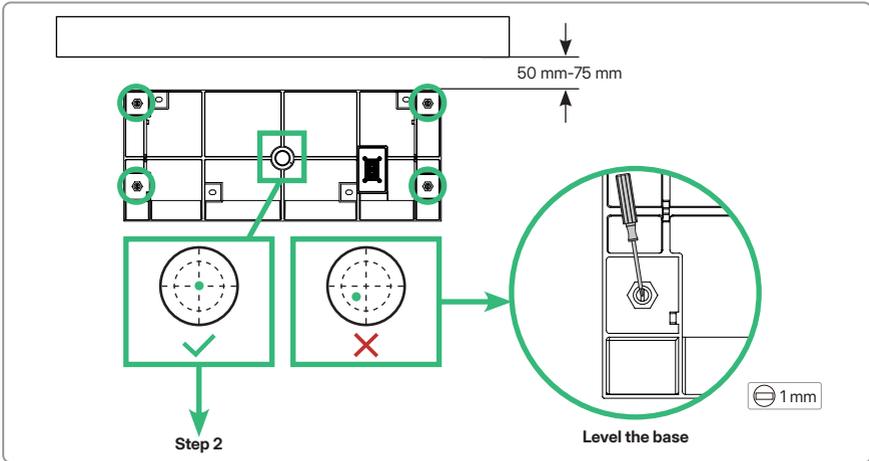


Step 2 Fix the base.

- A. Mark hole positions.
- B. Drill holes.
- C. Hammer and tighten the expansion screws.

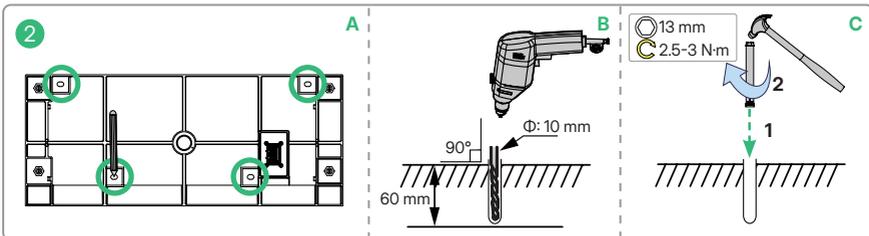


D. Unscrew the screws while leaving sleeves in place.

E. Place the base, insert the screws into the sleeves, and tighten them.


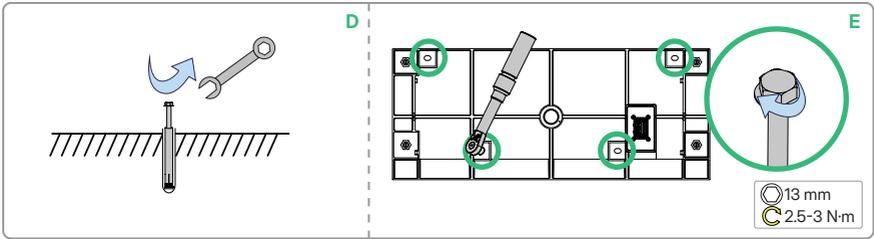


Step 3 Install the handles.

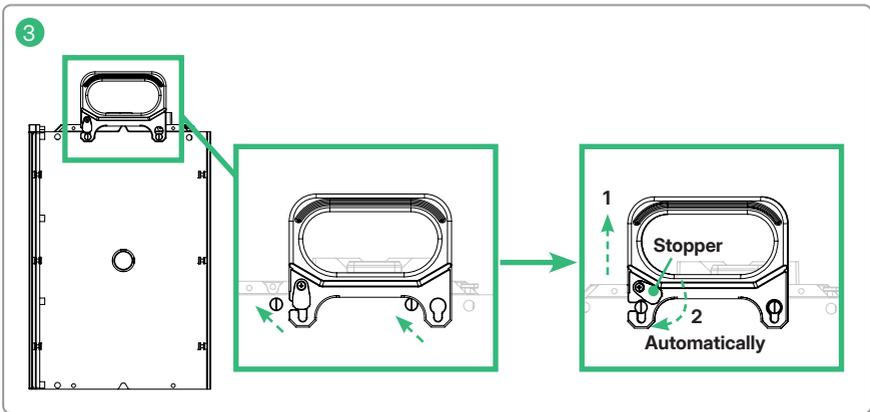


Step 4 Remove the connector cover of the battery.

Step 5 Hold the handles to lift the battery, align the connector, and place the battery on the base.

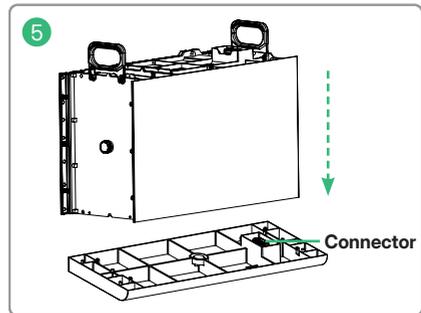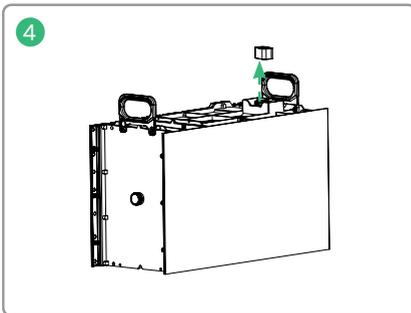



Step 6 Fix the battery.

- A. Place the two L-shaped brackets on the battery and mark the two hole positions.
- B. Drill holes with a diameter of 10 mm and a depth of 60 mm.
- C. Hammer the expansion screws into the holes and tighten them.
- D. Unscrew the screws while leaving sleeves in place.
- E. Secure the connection between the base and the battery.
- F. Place the L-shaped brackets again, and use M4 screws to fix them on the battery.
- G. Insert the screws into the sleeves, tighten them.

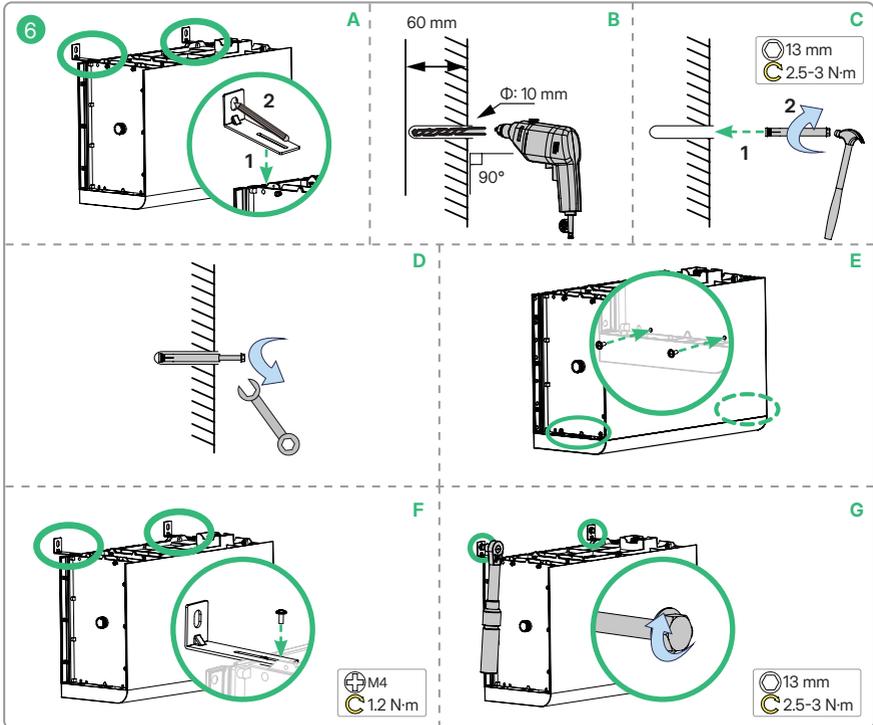


Step 7 Hold the handles to lift and stack the battery packs based on actual installation. Repeat [step 6](#) to secure the connection between the battery packs and fix the battery on the wall.

Step 8 Use the handles provided to place the inverter on the battery.

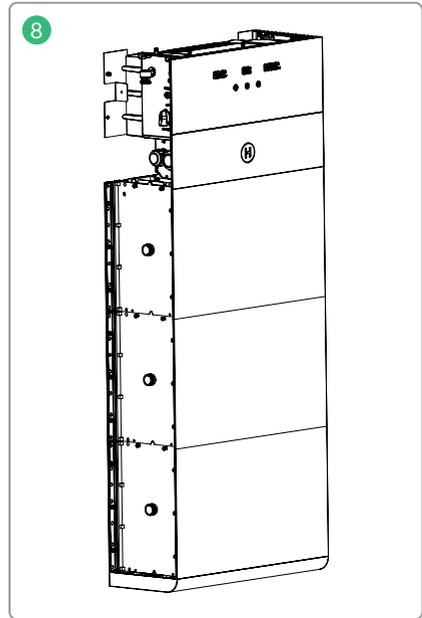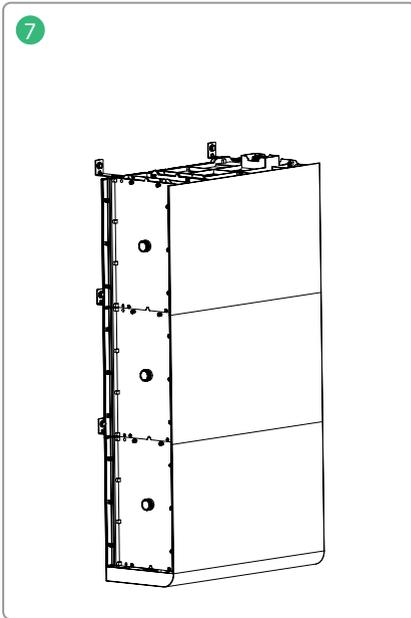



Step 9 Fix the inverter.

- A. Place the two L-shaped brackets against the wall, align them with the screw holes on the inverter, and mark the hole positions on the wall.
- B. Drill holes with a diameter of 10 mm and a depth of 60 mm.
- C. Hammer the expansion screws into the holes and tighten them.
- D. Unscrew the screws while leaving sleeves in place.
- E. Secure the connection between the inverter and the battery.
- F. Place the two L-shaped brackets again and use M4 screws to install them on the inverter.
- G. Insert the screws into the sleeves and tighten them.

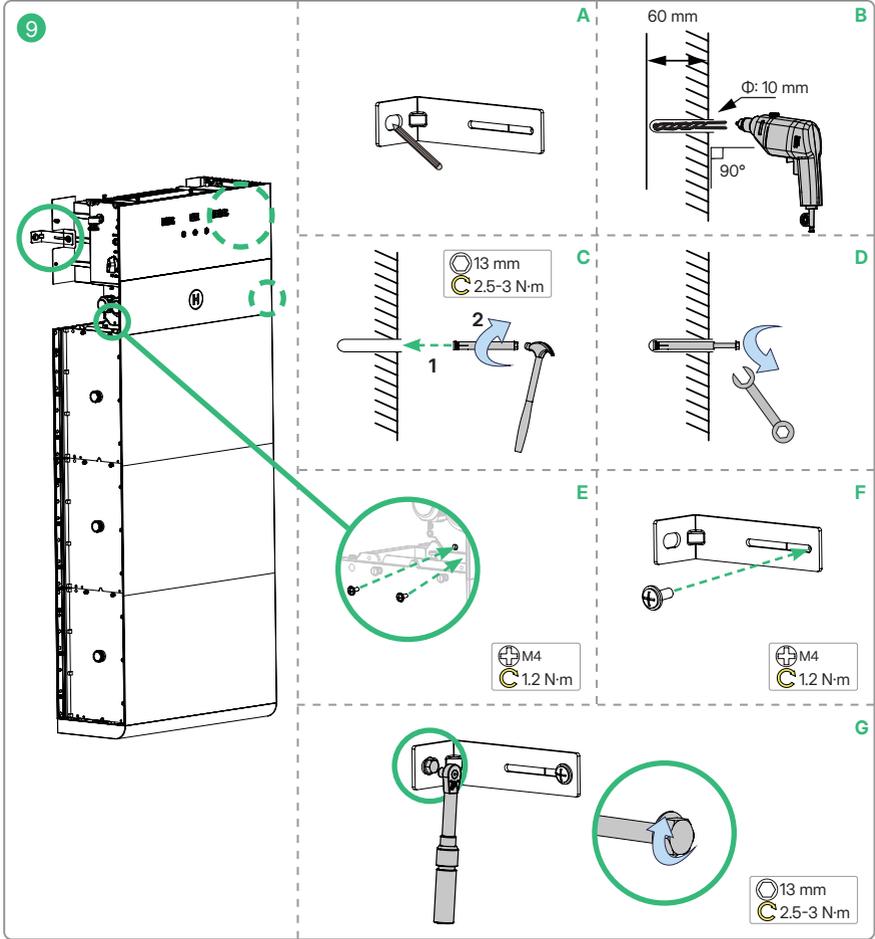


Step 10 Unscrew the two screws on the left side of the inverter.

Step 11 Open the wiring box cover.

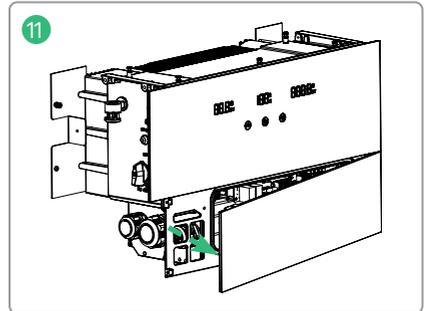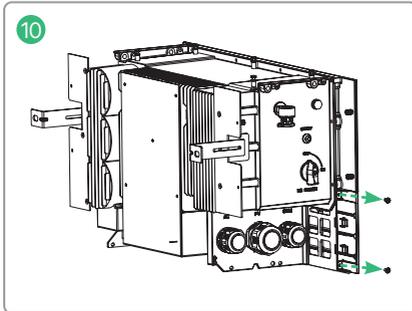

5 Electrical Connection

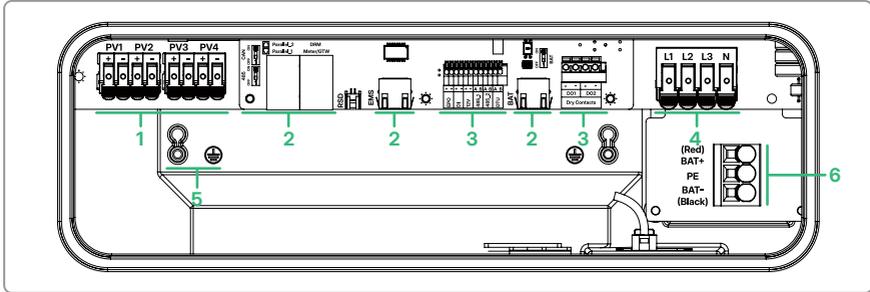



NO.	Description	NO.	Description
1	PV Terminals	4	AC Terminals
2	Communication Terminals (COM1)	5	Ground Terminal
3	Communication Terminals (COM2)	6	Battery Terminals (For Parallel Towers)

Note:

- The following data is the cable specification recommended by Hoyalms.
- The cables used in actual installation can be larger than the recommended specifications, but cannot be smaller than the recommended specifications. Select the appropriate cables in accordance with local laws and regulations.
- To ensure a reliable electrical connection, it is recommended to use crimp terminals when connecting cables to the inverter.
- The wiring color code may vary. Please follow local laws and regulations for wiring.

Ground Cable Connection







Cable (90°C, Copper)	Recommended Specification (mm ²)					Stripping Length (mm)
	HiOne-8T-G3	HiOne-10T-G3	HiOne-12T-G3	HiOne-16T-G3	HiOne-20T-G3	
Ground	2.5-4			4-6		12


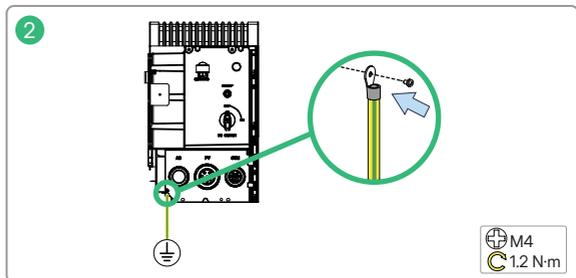
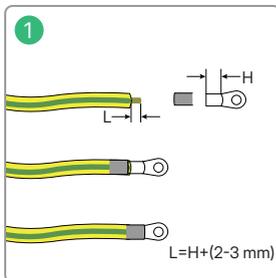


AC Cable Connection

Cable (90°C, Copper)	Recommended Specification (mm ²)					Stripping Length (mm)
	HiOne-8T-G3	HiOne-10T-G3	HiOne-12T-G3	HiOne-16T-G3	HiOne-20T-G3	
AC	2.5-4			4-6		18

Taking **HiOne-20T-G3** as an example:

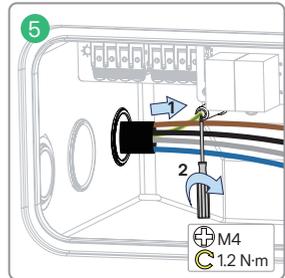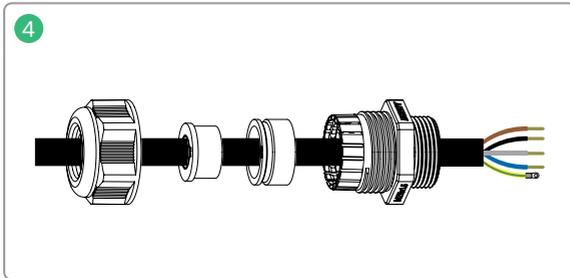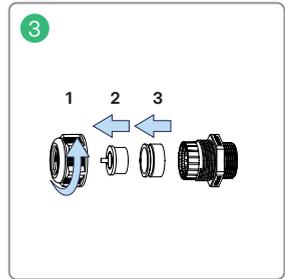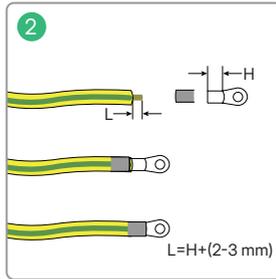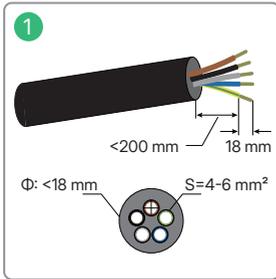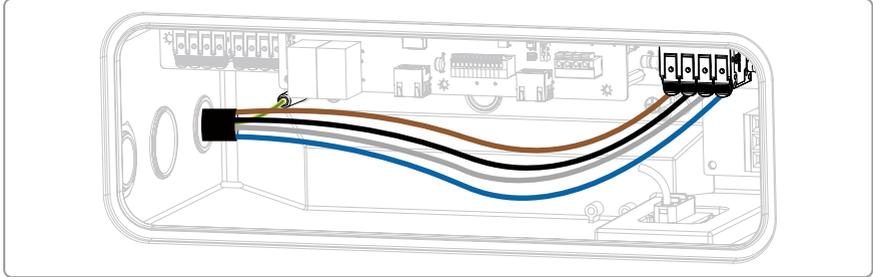

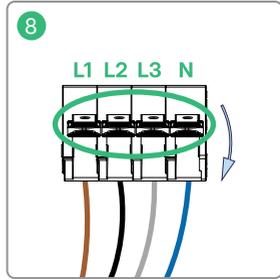
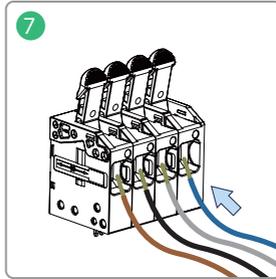
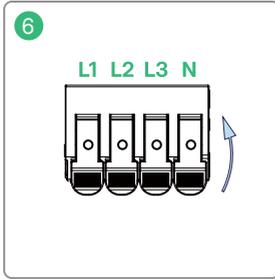


Note:

Tighten the cable gland with a torque of 7 N·m to 8 N·m after completing the wiring.




PV Cable Connection

Cable (90°C, Copper)	Recommended Specification (mm ²)	Stripping Length (mm)
		HiOne-8/10/12/16/20T-G3
PV	4-6	12

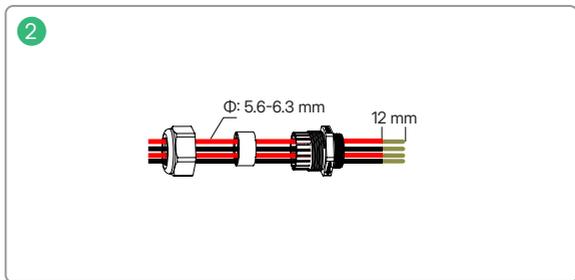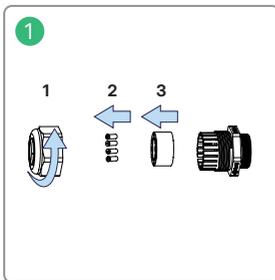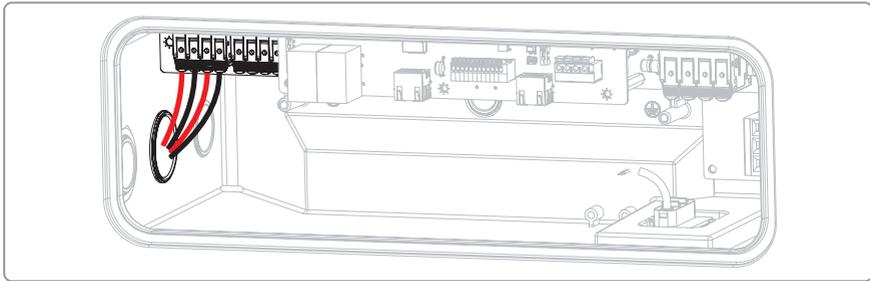

Note:







To ensure sealing performance, remove the rubber plugs based on the actual number of cables.


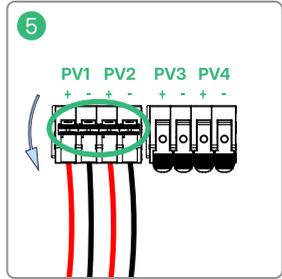
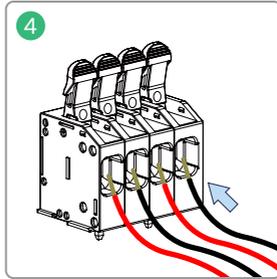
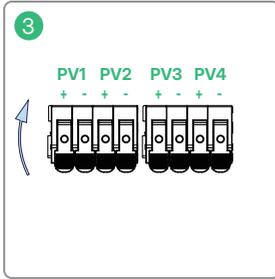


Note: Tighten the cable gland with a torque of 10 N·m to 13 N·m after completing the wiring.

(Optional) Battery Cable Connection


If the second battery tower needs to be installed, use the provided cable to connect the second battery tower to the inverter.

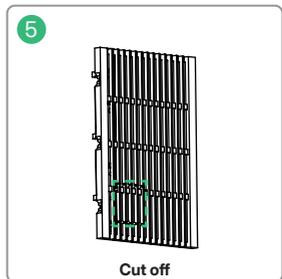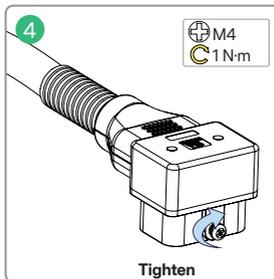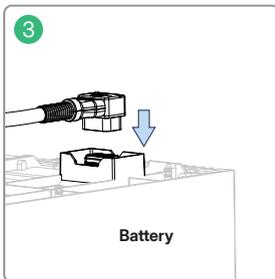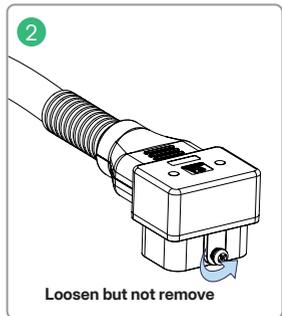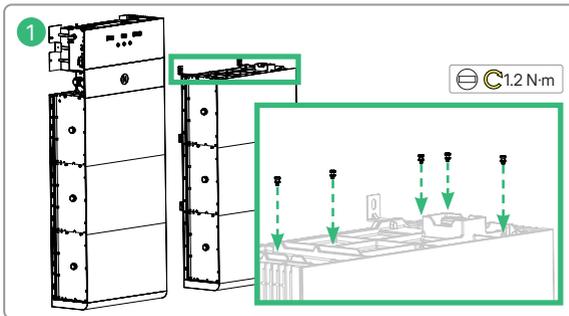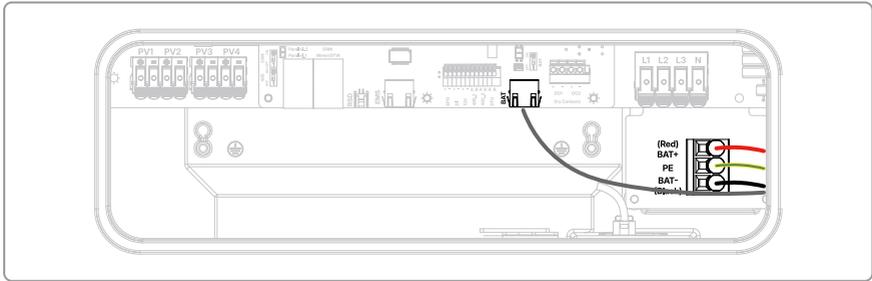

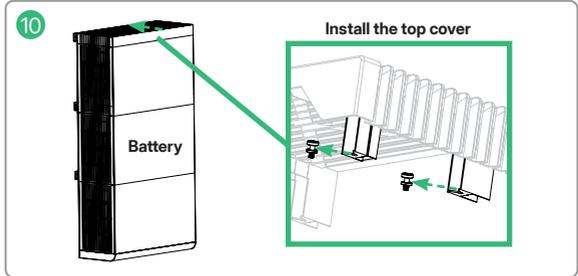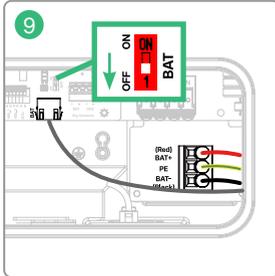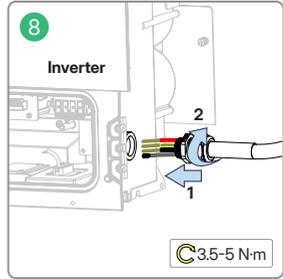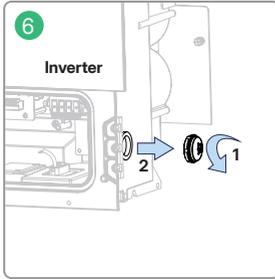

Communication Cable Connection

COM1 Connection

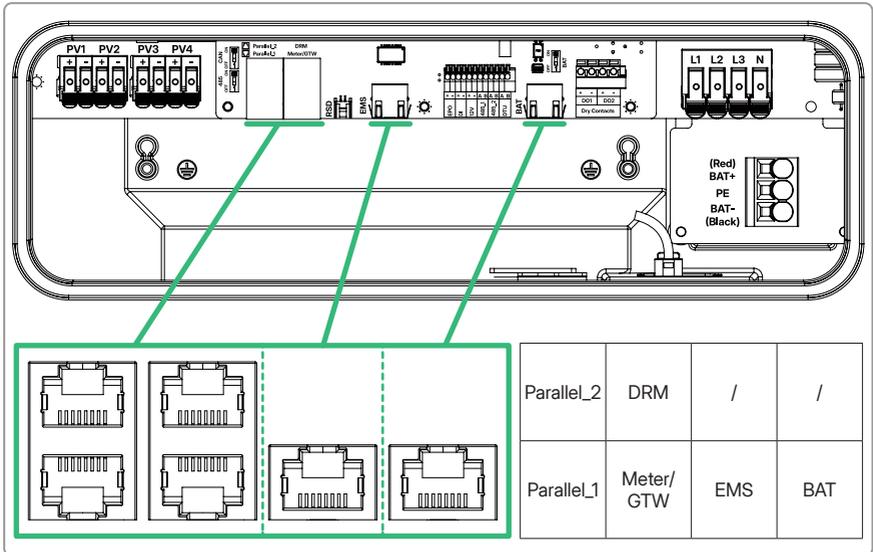




Terminal	PIN	Definition							
		1	2	3	4	5	6	7	8
Parallel_2	87654321	NC	GND	CANH	Psync-485A	Psync-485B	CANL	485B	485A
Parallel_1	12345678	NC	GND	CANH	Psync-485A	Psync-485B	CANL	485B	485A
DRM	87654321	DRM1/5	DRM2/6	DRM3/7	DRM4/8	REF	COM	NC	NC
Meter/GTW	12345678	CANH	CANL	GND	485A	485B	GND	+12V1A_OUT	+12V1A_OUT
EMS	87654321	RX_P	RX_N	TX_P	NC	NC	TX_N	NC	NC
BAT	87654321	Button 2+	Button 2-	NC	NC	+12V	GND	CANL	CANH



Note:

If the batteries are stacked in one battery tower, ensure that this termination resistor is "ON".

Taking Meter Connection as an example:

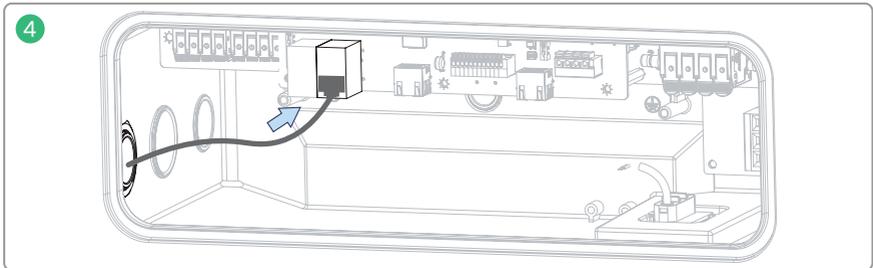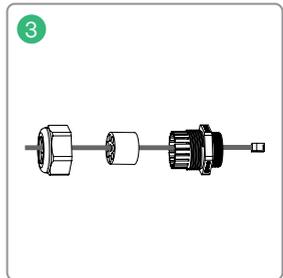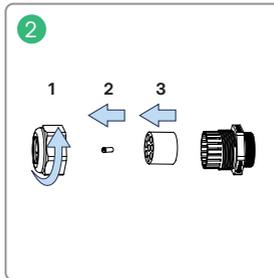


Note:

- To ensure sealing performance, remove the rubber plugs based on the actual number of cables.
- Tighten the cable gland with a torque of 6.75 N-m to 7.5 N-m after completing the wiring.

Meter and CT Connection

- Step 1** Respectively connect the meter's terminals L1, L2, L3, and N to Grid L1, L2, L3, and N.
- Step 2** Clamp the grid side CTs onto Grid L1, L2, and L3. Ensure the arrow on each CT points to the grid.
- Step 3** Connect the CTs to the meter's CT1 terminal.
- Step 4** (Optional) If a PV inverter is connected:
 - a. Clamp the PV inverter side CTs onto L1, L2, and L3. Ensure the arrow on each CT points to the opposite direction of the PV inverter.
 - b. Connect the CTs to the meter's CT2 terminal.
- Step 5** Use a standard Ethernet cable to connect the meter's RS485 terminal and the inverter's meter terminal.

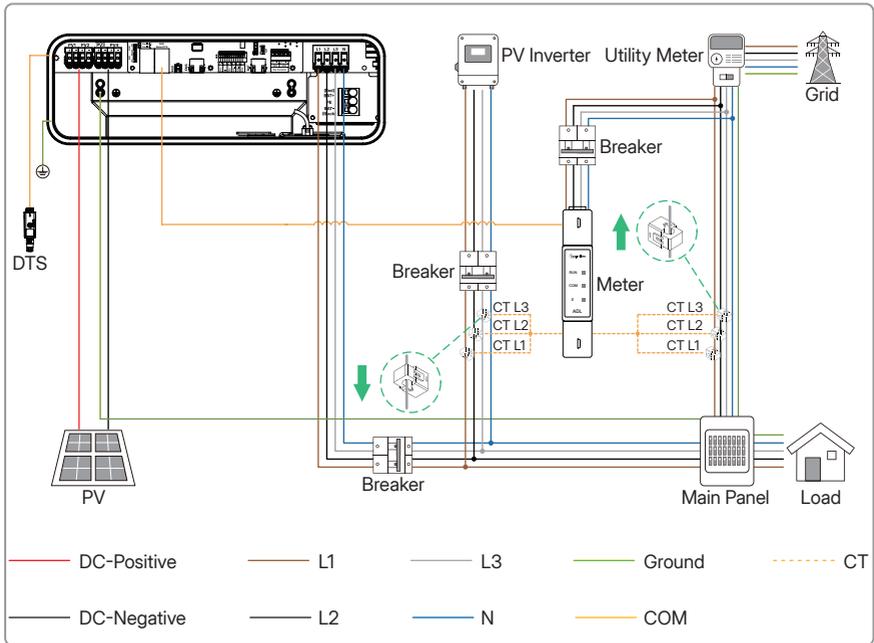


Note:

- This series inverter comes with Meter-1T-G3 or Meter-1T-G3 (2 CT Port) as standard.
- To install an AC coupled system:
 - ▷ If the meter you received is Meter-1T-G3, Meter-2T-G3 must be purchased separately from Hoymiles.
 - ▷ If the meter you received is Meter-1T-G3 (2 CT Port), another set of CTs must be purchased separately from Hoymiles.
- In an AC coupled system, the grid side CTs must be connected to the meter's CT1 terminal, and the PV inverter side CTs must be connected to the meter's CT2 terminal.


COM2 Connection

Cable	Recommended Specification (mm ²)	Stripping Length (mm)
		HiOne-8/10/12/16/20T-G3
COM2	0.5-0.8	11

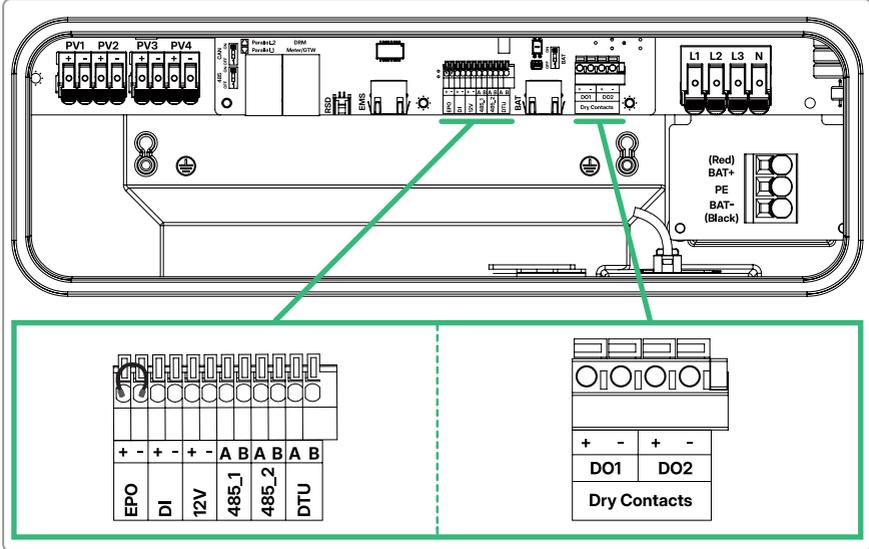

Label	Definition
EPO	For external Emergency Power Off switch.
DI	Reserved dry contact input.
12V	12V/1A output. For heat pump control by connecting an external relay. For the Gateway connection.
485_1	For the third-party EMS communication.
485_2	For the EV charger control.
DTU	For DTU communication.
DO1 (NO1, COM1)	Dry contact output. For SG Ready heat pump control.
DO2 (NO2, COM2)	Reserved dry contact output.


Taking DO1 Connection as an example:

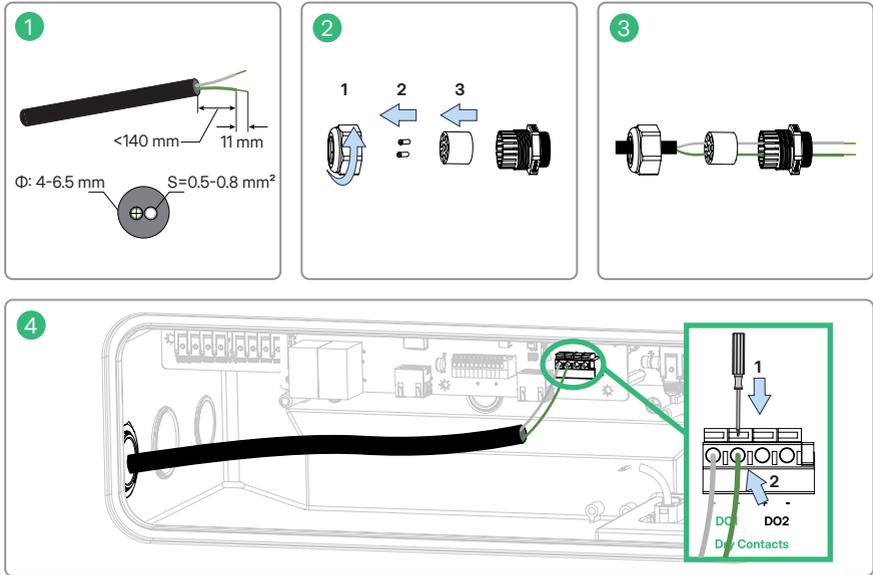

Note:


- To ensure sealing performance, remove the rubber plugs based on the actual number of cables.
- Tighten the cable gland with a torque of 6.75 N-m to 7.5 N-m after completing the wiring.

Installing the Wiring Box Cover

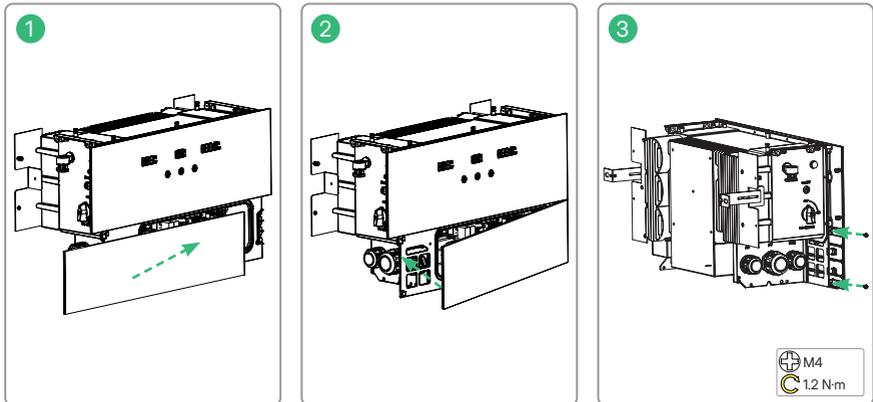


Installing the Data Transfer Stick (DTS)

DTS-WL-G3 (Wi-Fi Mode)

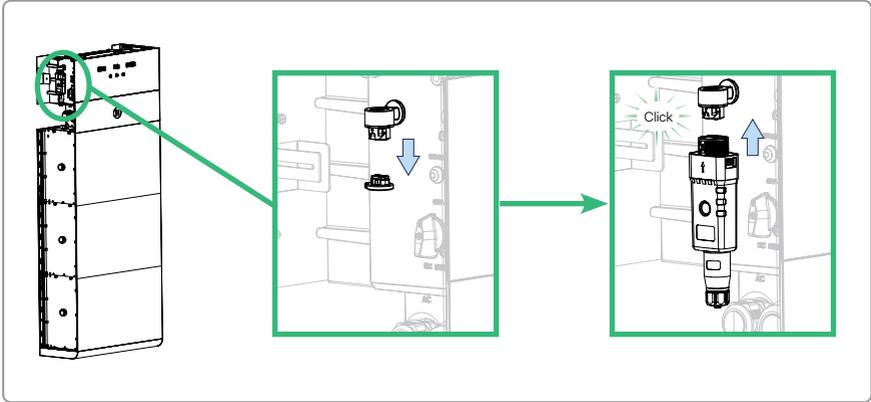

DTS-WL-G3 (LAN Mode)

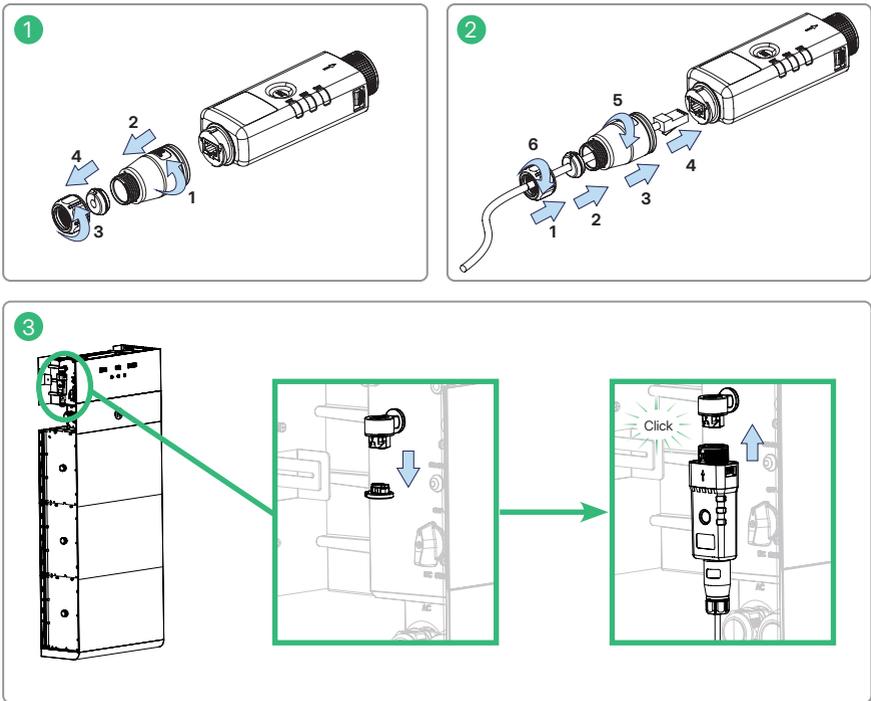


6 System Power-on

- Step 1** Turn on the AC breaker between the inverter and the grid.
- Step 2** Rotate the DC switch to "ON" if the inverter is connected to the PV strings.
- Step 3** (Optional) Press the power button on the left side of the inverter to activate the battery if the battery SOC is lower.
- Step 4** Verify that the inverter is operating properly by checking the inverter indicator status.

Indicator		Status		Explanation
	PV		Digital readout	Real-time Power Generation
		/	Off	No PV Power
	Battery SOC		Digital readout	Real-time SOC
		/	Off	No Battery Connection
	Battery Status		Solid white	Battery Charging
			Solid red	Battery Fault
		/	Off	Battery Discharging/Standby/ No Battery Connection
	Load Consumption		Digital readout	Real-time power consumption
			0.0 display	No load connection/Zero consumption/No meter connection
	Meter		Solid white	Normal
			Solid red	Communication Fault
		/	Off	No Meter Connection
	State		Solid white	System Normal Operation/Standby
			Solid red	System Fault
		/	Off	System Power-off
	Internet		Solid white	Connected to Network and Cloud
			Flashing white	Connected to Network, but Not Connected to Cloud
		/	Off	No DTS Connection

7 Decorative Cover Installation

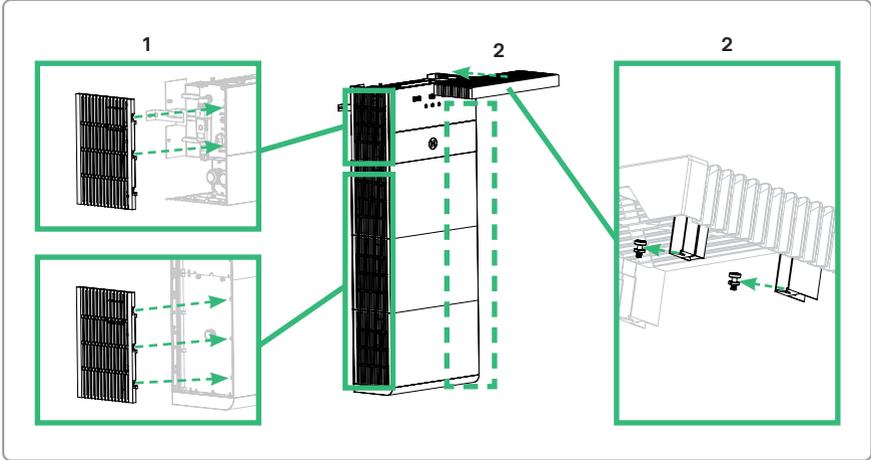

8 Commissioning via Hoymiles App





User Manual in the QR code or at
www.hoymiles.com/download-center.html



Installation video in the QR code or at
www.youtube.com/@Hoymiles/videos



Hoymiles Power Electronics Inc.

Add: Floor 6, Building 5, 99 Housheng Road, Gongshu District,
Hangzhou 310015, P. R. China

Tel: +86 571 2805 6101

Email: service@hoymiles.com
support@hoymiles.com

www.hoymiles.com



A400300404